



Installation Instructions Seat Covers, Front Kit

Vehicle Application:
Jeep Wrangler JL 2-Door 2018-current
Part Number 29293

Installation Tips

Read and follow, precisely, all installation instructions provided when installing this product. Failure to do so may result in a poor fit, and could place occupants of the vehicle in a potentially dangerous situation.

WARNING

To reduce the risk of accidental injury: Follow all vehicle Manufacturer's and Bestop® safety messages, application and installation instructions.

- Do not remove seats from the vehicle to install this product.
- Fit and maintain sides of seat cover as tight to seat as possible, always matching front to side seam of seat with similar panels and seams of seat cover.
- Remove headrest carefully to avoid damaging manufacturer's wiring.

Assure all plugs are connected after installation of seat cover.

- Do not use and replace if seat cover becomes damaged or wear no longer allows a tight fit to seat sides.



Care & Maintenance

Your seat covers are machine washable. Wash separately in COLD water with ¼ of normal amount of soap. Hang dry.

WEAR SEAT BELTS AT ALL TIMES

Tools



Safety
Glasses



CAUTION

Safety glasses should be worn at all times when installing this product.

Installation Time



2 hours

Skill Level



3 - Moderately Difficult

Support

We're here to help! Go to:
<https://www.bestop.com>
and click on **Need Help?**



<https://www.bestop.com/video-library>






 



Installation Instructions Seat Covers, Front Kit

Vehicle Application:
Jeep Wrangler JL 2-Door 2018-current
Part Number 29293

Parts List


- Required parts for installation - Page number in Installation Guide

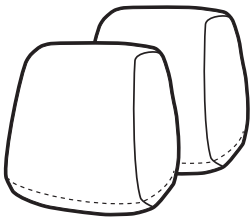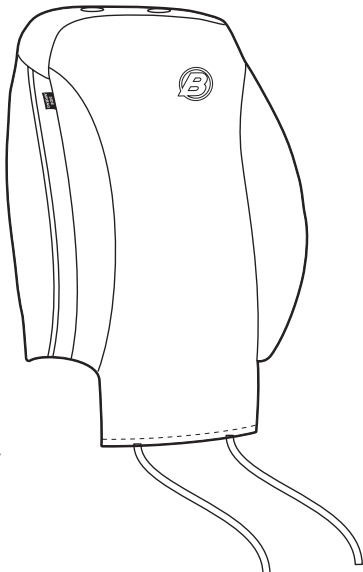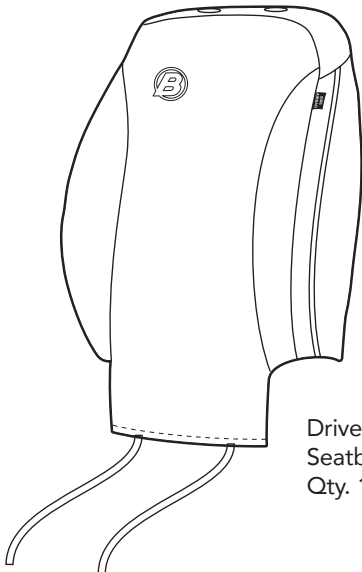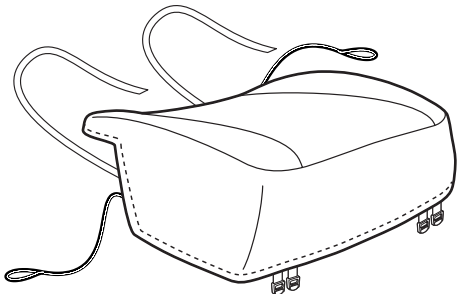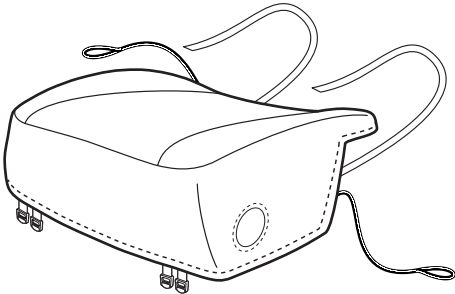All Sections		Headrest Covers; Seatback Covers	Pages 3 to 7 of Guide
		Headrest Covers Qty. 2	
		Passenger-Side Seatback Cover Qty. 1	
			Driver-Side Seatback Cover Qty. 1
All Sections		Seat Bottom Covers; S-Hooks	Pages 3 to 7 of Guide
		Passenger-Side Seat-Bottom Cover Qty. 1	
		Driver-Side Seat-Bottom Cover Qty. 1	
			Seat-Bottom Elastic Cord S-Hooks Qty. 2

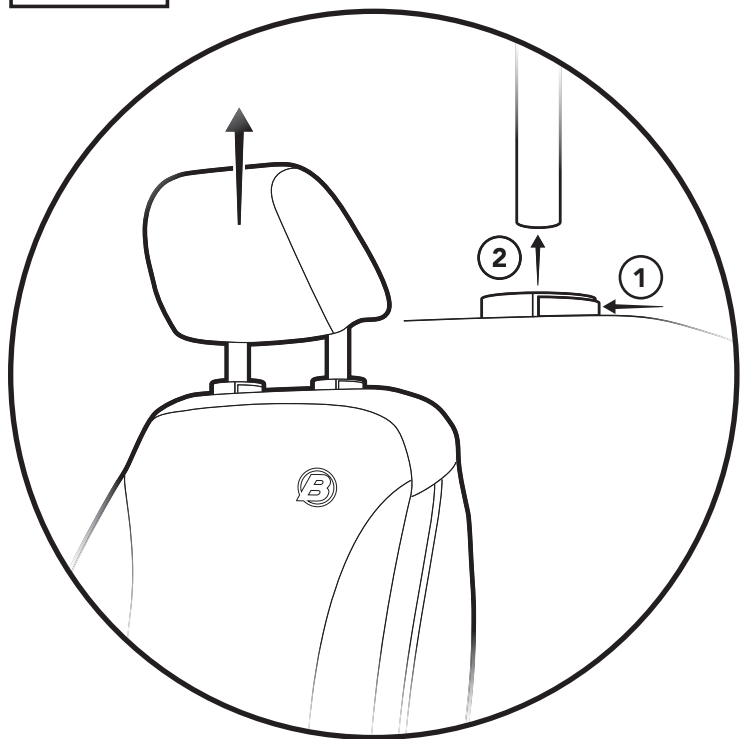Step 1**Step 1**

Remove the headrest from the driver's seat by pushing in on the release buttons supporting the headrest shafts and lifting up on the headrest.

Repeat this procedure for the passenger side seat.

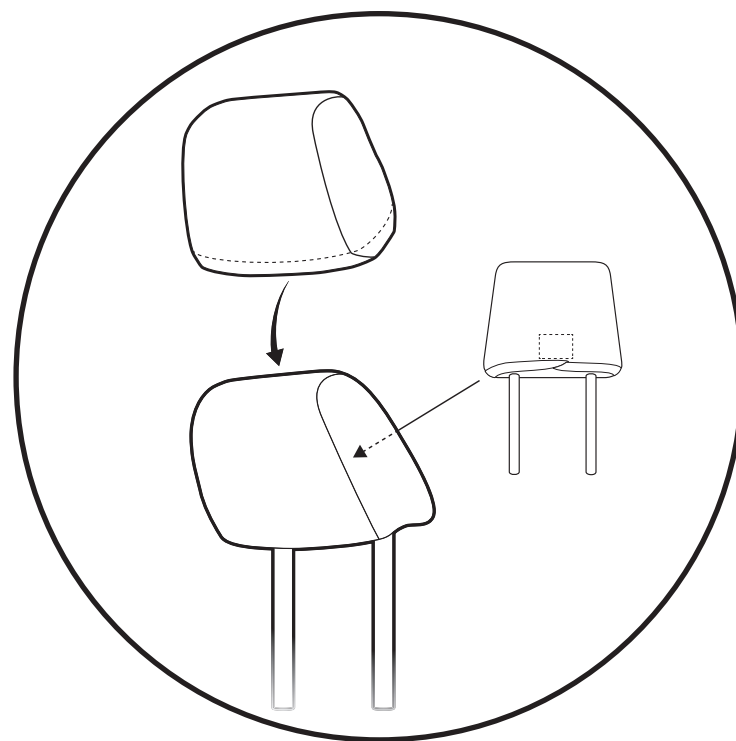
Step 2**Step 2**

Wrap the headrest covers over the headrests, making sure that the crossed elastic edging and internal label are at the back of each headrest.

Adjust the seams for a smoother appearance.

Set headrests aside - do not reinstall at this time.

Step 1

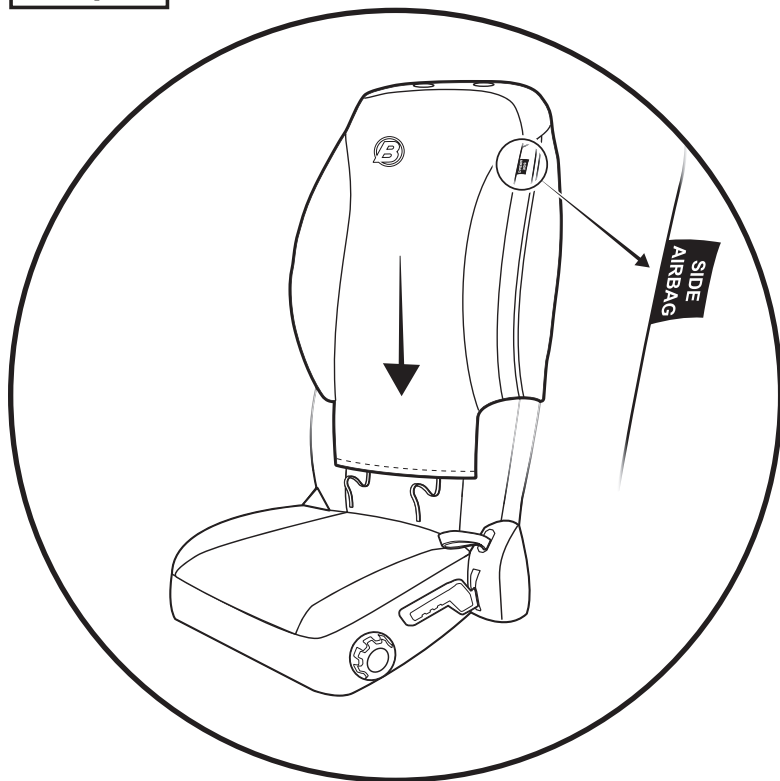


Step 1

Slip the driver-side seat cover over the driver's seat, gently working the fabric down over the seat.

Make sure that the Side Airbag tag is nearest the vehicle door.


Repeat this procedure on the passenger seat.

Hardware

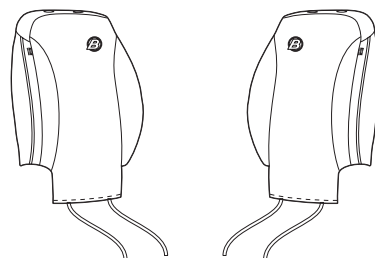

Seatback Covers
Qty. 1 of each side


Step 2

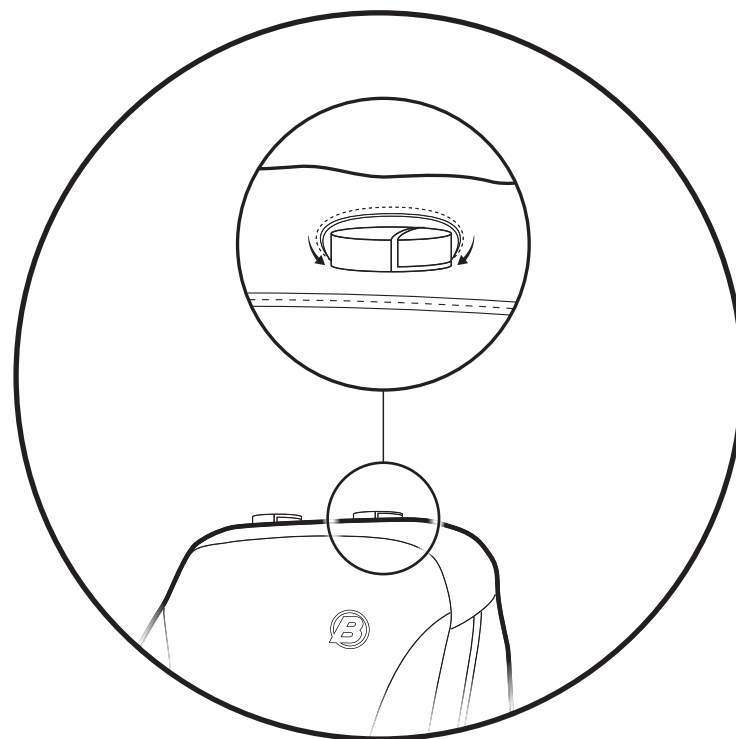

Step 2

Carefully stretch and tuck the seat cover fabric around and under the headrest release buttons on both driver and passenger seat covers.

Step 1

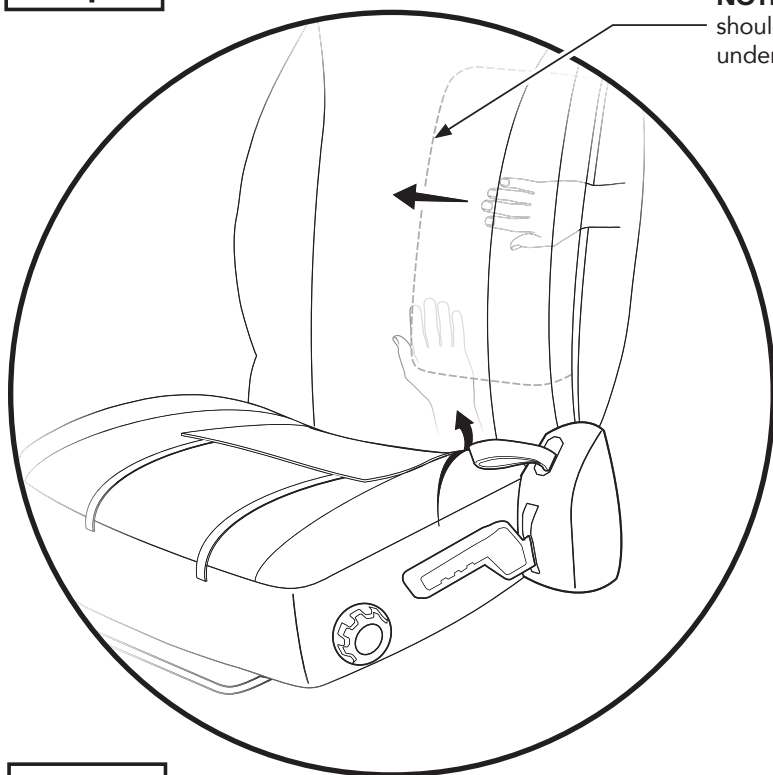


NOTE: The airbag flap should lie flat and smooth under the seat cover.

Step 1

Before you tuck the flap at the bottom of the cover between the seatback and bottom, tuck the airbag flap into the airbag opening with one hand, while at the same time reaching up under the front of the seat cover with the other hand to pull the airbag flap tight and smooth inside the seat cover.

Repeat this procedure for the passenger seat.

Step 2

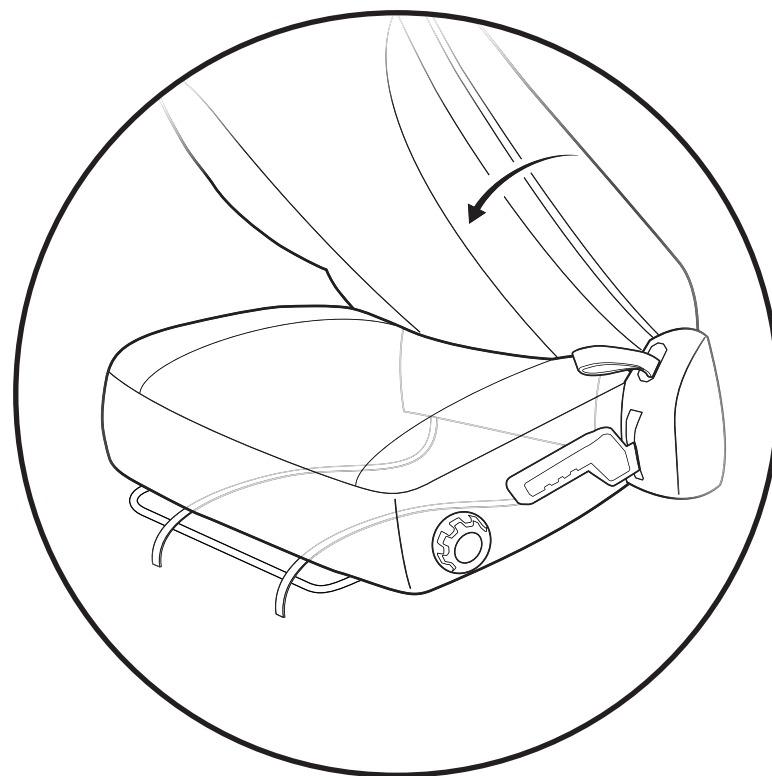


Step 2

Tilt the seatback forward and tuck the flap and the straps at the bottom of the seat cover between the seatback and the seat bottom, so the straps are underneath the seat.

Bring the straps forward, making sure that they are above all metal cross-members underneath the seat, and drape them over the slide release bar at the front of the seat.

Repeat this procedure for the passenger seat.

Step 1

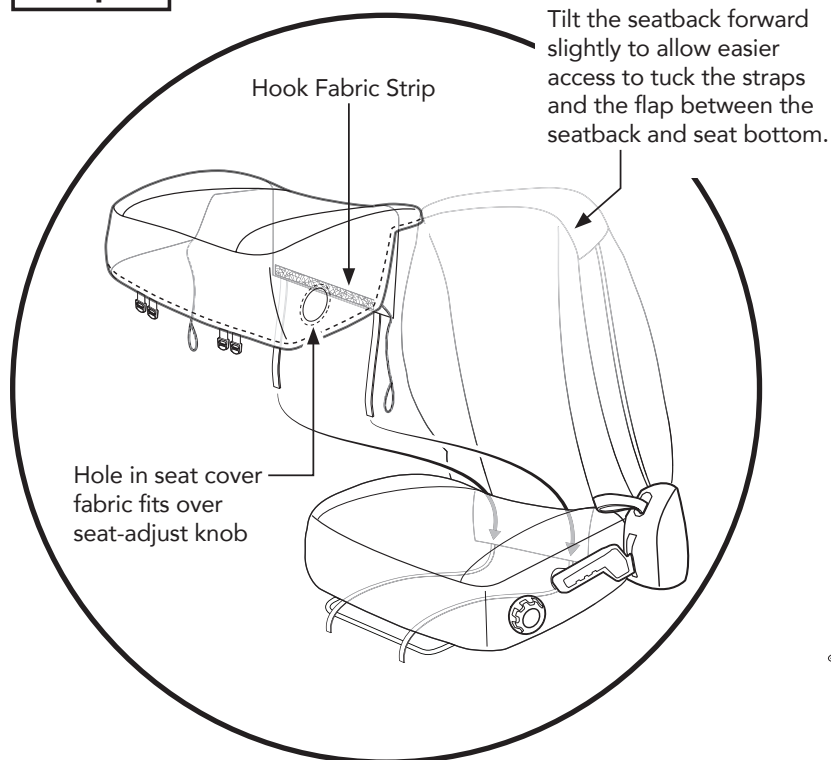

Step 1


Slip the seat bottom cover over the seat, working the fabric toward the rear of the seat. Carefully fit the hole in the fabric over and around the seat adjustment knob.

Tuck the nylon straps between the seatback and the seat bottom, and bring them to the front of the underside of the seat, making sure that the straps go over all the metal cross-members underneath the seat.


Tuck the flap between the seatback and the seat bottom, and working from behind the seat, pull the seat cover flap through enough to wrap around the factory installed carpeted flap and hook the fabric strip to the carpeted flap.

IMPORTANT: This must be done to keep the cushion seat cover from sliding forward during use.

Hardware

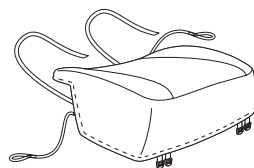

Passenger-Side
Seat-Bottom Cover
Qty. 1

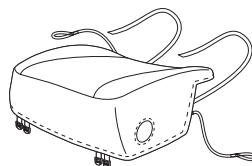


Driver-Side
Seat-Bottom Cover
Qty. 1



Seat-Bottom
Elastic Cord S-Hooks
Qty. 2

Step 2

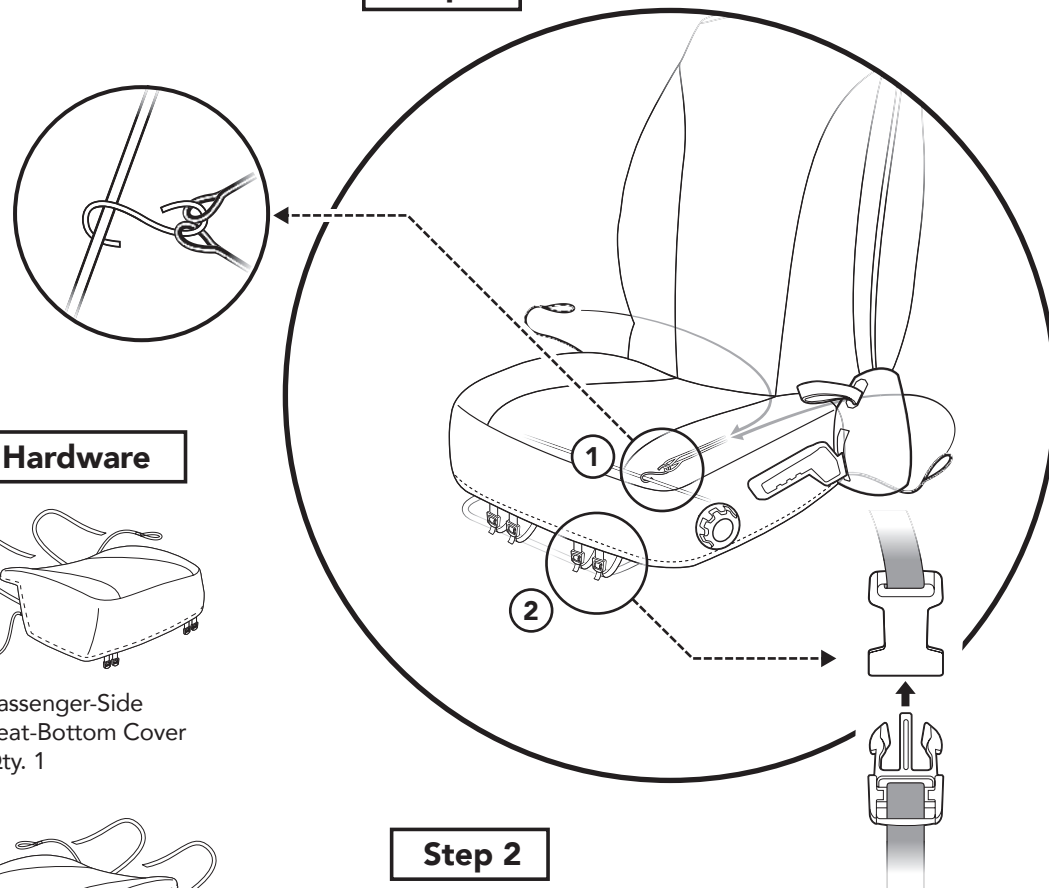


Step 2

Attach the two ends of the elastic cords to the closed end of the the s-hook. Attach the s-hook to a cross-member or wire underneath the seat, making sure to keep the cords away from the seat adjustment tracks.

Unclip the 4 side-release buckles and thread them onto the straps. Clip the buckles back together, and give the straps a gentle tug to snug the covers.

Verify the straps do not interfere with or unplug any of the wiring found under the seat. Make sure that the seat will tilt forward and back, and slide from front to back without the seat rail snagging the straps.

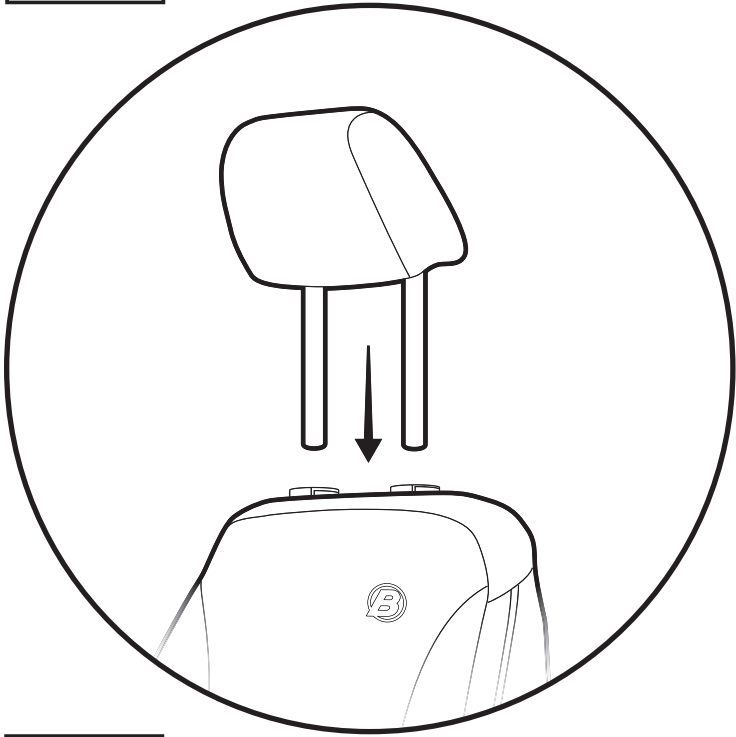Step 1**Step 1**

Replace the headrests on both the driver and passenger seats.